
MCM Bad Channel List from the SLAC Final Test

Serial Number 235 *Part Number* LAT-DS-00899

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	61	Disconnected
1	62	Disconnected
5	48	Disconnected
5	49	Disconnected

Serial Number 269 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
11	54	Disconnected
11	55	Disconnected
11	56	Disconnected
11	57	Disconnected
11	58	Disconnected
11	59	Disconnected

Serial Number 294 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
18	54	Disconnected

Serial Number 336 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
3	32	Disconnected
3	33	Disconnected
5	55	Bad Gain
6	2	Disconnected
6	3	Disconnected
6	4	Disconnected
6	5	Disconnected
6	6	Disconnected
22	23	Dead
22	24	Dead

22 25 Dead
22 26 Dead

Serial Number 342 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
5	32	Disconnected
10	33	Disconnected
10	34	Disconnected
15	30	Disconnected
15	38	Disconnected
15	43	Disconnected
17	45	Disconnected
17	50	Disconnected

Serial Number 365 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
19	6	Disconnected
19	8	Disconnected
19	10	Disconnected
19	11	Disconnected
19	12	Disconnected
19	13	Disconnected
19	15	Disconnected
22	20	Disconnected

Serial Number 366 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	7	Disconnected

Serial Number 367 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
13	36	Disconnected
13	37	Disconnected
13	38	Disconnected
13	39	Disconnected

20 39 Disconnected
20 40 Disconnected
20 41 Disconnected

Serial Number 368 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

13 25 Dead

Serial Number 388 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 5 Disconnected

Serial Number 389 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 3 Disconnected

Serial Number 392 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 5 Disconnected

Serial Number 395 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

2 26 Disconnected
3 49 Disconnected
4 9 Disconnected
13 0 Disconnected
13 1 Disconnected
15 0 Disconnected
16 6 Disconnected
16 7 Disconnected

Serial Number 396 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

19 10 Disconnected
19 11 Disconnected
21 34 Disconnected

22 3 Disconnected
22 4 Disconnected
23 15 Disconnected

Serial Number 422 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 7 Disconnected

Serial Number 423 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

2 4 Dead

Serial Number 432 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

21 55 Disconnected

Serial Number 448 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 6 Disconnected

Serial Number 450 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0 1 Dead
0 1 Dead
0 2 Dead
0 3 Dead
0 4 Dead
0 5 Dead
0 6 Dead

Serial Number 457 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

3 48 Disconnected

Serial Number 477 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

21 55 Disconnected

Serial Number 478 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

3 44 Disconnected

Serial Number 481 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

6 45 Disconnected

Serial Number 511 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0 56 Dead

0 57 Dead

3 46 Disconnected

3 53 Disconnected

23 6 Disconnected

23 8 Disconnected

23 9 Disconnected

Serial Number 525 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 6 Disconnected

Serial Number 529 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

9 32 Dead

22 13 Disconnected

22 14 Disconnected

22 26 Disconnected

22 27 Disconnected

22 46 Disconnected

22 51 Disconnected

22 52 Disconnected

23 5 Disconnected

23 17 Disconnected

23	18	Disconnected
23	19	Disconnected
23	20	Disconnected
23	21	Disconnected
23	21	Disconnected
23	22	Disconnected
23	23	Disconnected

Serial Number 540 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
5	48	Disconnected
5	49	Disconnected
6	8	Disconnected
6	9	Disconnected
6	10	Disconnected
20	43	Disconnected
20	44	Disconnected
22	62	Disconnected

Serial Number 542 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
10	30	Bad Gain
14	54	Disconnected
14	55	Disconnected
14	56	Disconnected
16	5	Disconnected
16	6	Disconnected
21	54	Disconnected

Serial Number 564 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	6	Disconnected

Serial Number 591 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

3	36	Disconnected
3	37	Disconnected
3	38	Disconnected
3	39	Disconnected
3	40	Disconnected
3	41	Disconnected
3	42	Disconnected
3	43	Disconnected
3	44	Disconnected
3	45	Disconnected
3	46	Disconnected
3	47	Disconnected
3	48	Disconnected
15	39	Dead
15	40	Dead
17	33	Disconnected
17	37	Disconnected

Serial Number *622* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
21	39	Dead
21	41	Dead
21	42	Dead

Serial Number *624* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
0	56	Dead
0	57	Dead

Serial Number *634* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
9	59	Dead
9	60	Dead
16	49	Disconnected
16	55	Disconnected

17 4 Disconnected
17 5 Disconnected

Serial Number *652* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
3	17	Disconnected
19	16	Disconnected
22	23	Disconnected
23	48	Dead

Serial Number *662* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
21	12	Disconnected
21	15	Disconnected
21	16	Disconnected
21	17	Disconnected
21	18	Disconnected
21	19	Disconnected
21	20	Disconnected
21	21	Disconnected
23	63	Disconnected

Serial Number *664* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
15	21	Disconnected
15	22	Disconnected
15	23	Disconnected
22	62	Disconnected
23	10	Disconnected
23	11	Disconnected

Serial Number *665* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
18	47	Disconnected
18	48	Disconnected

18 49 Disconnected

Serial Number 675 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 2 Disconnected

16 4 Disconnected

21 29 Disconnected

21 31 Disconnected

Serial Number 676 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

17 18 Bad Gain

Serial Number 677 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

18 41 Disconnected

18 42 Disconnected

18 43 Disconnected

18 44 Disconnected

18 45 Disconnected

21 10 Disconnected

Serial Number 680 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0 32 Dead

0 33 Dead

Serial Number 695 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

1 13 Disconnected

6 15 Disconnected

14 57 Disconnected

16 6 Disconnected

16 7 Disconnected

17 19 Disconnected

21 56 Disconnected

Serial Number 696 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
3	24	Disconnected
3	34	Disconnected
3	35	Disconnected
10	9	Disconnected
10	11	Disconnected
10	13	Disconnected
10	17	Disconnected
10	27	Disconnected
11	7	Disconnected
11	53	Disconnected
15	0	Disconnected
15	1	Disconnected
15	2	Disconnected
15	3	Disconnected
15	4	Disconnected

Serial Number 697 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	12	Dead
1	13	Dead
1	21	Dead
1	22	Dead

Serial Number 729 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
14	17	Noisy
14	29	Noisy
23	62	Dead
23	63	Dead

Serial Number 732 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

3	37	Disconnected
3	38	Disconnected
3	39	Disconnected
3	40	Disconnected
3	41	Disconnected
3	42	Disconnected
8	47	Disconnected
8	48	Disconnected
8	49	Disconnected
8	50	Disconnected
23	6	Disconnected
23	25	Disconnected

Serial Number 734 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
21	55	Disconnected
21	56	Disconnected
22	16	Disconnected

Serial Number 735 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
15	4	Disconnected
15	6	Disconnected
15	8	Disconnected
15	9	Disconnected
15	21	Disconnected
16	7	Disconnected

Serial Number 740 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	2	Disconnected

Serial Number 777 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
12	4	Disconnected

16 5 Disconnected

Serial Number 803 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

5 21 Disconnected

20 12 Disconnected

20 16 Disconnected

Serial Number 816 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 5 Disconnected

Serial Number 853 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 4 Disconnected

23 62 Disconnected

Serial Number 860 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

17 18 Disconnected

17 19 Disconnected

21 36 Disconnected

21 55 Disconnected

22 15 Disconnected

Serial Number 861 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 6 Disconnected

21 56 Disconnected

Serial Number 862 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

9 53 Disconnected

9 54 Disconnected

14 40 Disconnected

18 43 Dead

18	44	Dead
19	45	Disconnected
19	59	Disconnected
19	60	Disconnected
19	61	Disconnected
19	62	Disconnected
19	63	Disconnected

Serial Number 863 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	7	Bad Gain
16	36	Bad Gain

Serial Number 883 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
4	19	Disconnected
4	20	Disconnected
5	8	Disconnected
8	57	Disconnected
8	58	Disconnected
8	59	Disconnected
8	60	Disconnected
8	61	Disconnected
8	62	Disconnected
10	32	Disconnected
15	24	Disconnected
16	1	Disconnected
18	48	Disconnected

Serial Number 904 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
22	27	Disconnected
22	28	Disconnected

Serial Number 912 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
0	28	Disconnected
0	41	Disconnected
0	54	Disconnected
1	24	Disconnected
1	27	Disconnected
1	40	Disconnected
2	42	Disconnected
2	43	Disconnected
2	62	Disconnected
3	7	Disconnected
3	20	Disconnected
3	33	Disconnected
4	5	Disconnected
4	6	Disconnected
23	61	Disconnected

Serial Number 933 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	38	Disconnected

Serial Number 961 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	24	Disconnected
1	25	Disconnected
1	46	Disconnected
1	55	Disconnected
4	4	Disconnected
16	2	Disconnected
18	38	Disconnected

Serial Number 965 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

2 9 Disconnected

Serial Number 972 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0 56 Disconnected

3 49 Disconnected

Serial Number 998 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

1 0 Disconnected

1 16 Disconnected

1 42 Disconnected

3 6 Disconnected

5 13 Disconnected

5 15 Disconnected

22 35 Disconnected

Serial Number 1012 *Part Number* LAT-DS-00899

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

3 57 Disconnected

10 50 Disconnected

13 3 Disconnected

16 1 Disconnected

18 13 Disconnected

18 14 Disconnected

18 16 Disconnected

18 18 Disconnected

18 19 Disconnected

18 20 Disconnected

18 21 Disconnected

18 24 Disconnected

Serial Number 1040 *Part Number* LAT-DS-00899

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

23 27 Disconnected

23	51	Disconnected
23	52	Disconnected
23	53	Disconnected
23	62	Disconnected
23	63	Disconnected

Serial Number *1048* *Part Number* *LAT-DS-00899*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
13	15	Disconnected
13	62	Dead
13	63	Dead

Serial Number *1063* *Part Number* *LAT-DS-00899*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
19	43	Disconnected
19	56	Disconnected
21	8	Disconnected

Serial Number *1067* *Part Number* *LAT-DS-00899*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
14	14	Disconnected
18	14	Disconnected
18	15	Disconnected
20	4	Disconnected

Serial Number *1087* *Part Number* *LAT-DS-00899*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
20	49	Disconnected

Serial Number *1100* *Part Number* *LAT-DS-00899*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	7	Disconnected
21	55	Disconnected

Serial Number *1103* *Part Number* *LAT-DS-00899*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16 6 Disconnected

Serial Number 1115 *Part Number* LAT-DS-00899

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
3	0	Disconnected
3	2	Disconnected
3	3	Disconnected
3	12	Disconnected
3	17	Disconnected
3	18	Disconnected
3	19	Disconnected
3	20	Disconnected
3	21	Disconnected
3	22	Disconnected
3	23	Disconnected
3	24	Disconnected
3	25	Disconnected
3	26	Disconnected

Serial Number 1118 *Part Number* LAT-DS-00899

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	2	Disconnected
22	23	Disconnected
22	38	Disconnected
22	39	Disconnected
22	45	Disconnected
22	46	Disconnected

Serial Number 11004 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
19	11	Disconnected

Serial Number 11011 *Part Number* LAT-DS-00898

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
20	52	Disconnected

22	25	Disconnected
22	26	Disconnected
23	18	Disconnected
23	19	Disconnected
23	20	Disconnected
23	21	Disconnected
23	22	Disconnected
23	23	Disconnected

Serial Number *11022* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
0	10	Disconnected
1	59	Disconnected
16	1	Disconnected
20	4	Disconnected
20	5	Disconnected
20	6	Disconnected
20	6	Disconnected
20	26	Disconnected

Serial Number *11038* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
7	26	Disconnected

Serial Number *11042* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
6	21	Disconnected

Serial Number *11046* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
11	14	Dead
11	15	Dead
11	16	Dead

Serial Number *11071* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

11	0	Disconnected
16	6	Disconnected
21	55	Disconnected

Serial Number *11135* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
17	51	Disconnected
22	6	Disconnected
23	62	Disconnected

Serial Number *11231* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	6	Disconnected

Serial Number *11233* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
22	21	Disconnected
22	22	Disconnected
22	23	Disconnected
22	24	Disconnected
22	25	Disconnected
22	26	Disconnected
22	27	Disconnected
22	29	Disconnected

Serial Number *11234* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
0	16	Disconnected
0	17	Disconnected
0	18	Disconnected
0	19	Disconnected
0	20	Disconnected
0	22	Disconnected
0	23	Disconnected
3	48	Disconnected

Serial Number *11235* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
0	41	Disconnected
2	41	Disconnected
2	42	Disconnected
2	43	Disconnected
2	44	Disconnected
14	55	Disconnected
16	6	Disconnected
17	48	Disconnected
18	18	Disconnected

Serial Number *11292* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	6	Disconnected

Serial Number *11296* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
0	52	Disconnected
3	49	Disconnected
23	63	Disconnected

Serial Number *11308* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	0	Dead
1	1	Dead

Serial Number *11321* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
2	42	Disconnected
2	43	Disconnected
2	44	Disconnected
2	45	Disconnected
2	46	Disconnected
18	28	Disconnected

20 52 Disconnected
20 53 Disconnected

Serial Number *11323* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
15	2	Disconnected
15	17	Disconnected
16	1	Disconnected
18	37	Disconnected

Serial Number *11336* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	6	Disconnected
16	7	Disconnected
18	13	Disconnected
18	14	Disconnected
18	15	Disconnected
18	16	Disconnected
18	16	Disconnected
18	17	Disconnected
18	18	Disconnected
18	19	Disconnected
18	44	Disconnected
18	45	Disconnected
18	46	Disconnected
18	47	Disconnected
18	47	Disconnected
18	48	Disconnected
18	49	Disconnected

Serial Number *11343* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
11	63	Disconnected

Serial Number *11345* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

17	49	Disconnected
----	----	--------------

Serial Number *11347* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

19	7	Dead
----	---	------

Serial Number *11348* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

11	2	Disconnected
----	---	--------------

Serial Number *11355* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0	21	Disconnected
---	----	--------------

0	49	Disconnected
---	----	--------------

0	50	Disconnected
---	----	--------------

5	1	Disconnected
---	---	--------------

5	40	Disconnected
---	----	--------------

5	41	Disconnected
---	----	--------------

18	41	Disconnected
----	----	--------------

Serial Number *11358* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0	6	Disconnected
---	---	--------------

Serial Number *11368* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

4	41	Disconnected
---	----	--------------

4	42	Disconnected
---	----	--------------

4	43	Disconnected
---	----	--------------

Serial Number *11377* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16	5	Disconnected
----	---	--------------

Serial Number *11391* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
17	17	Disconnected
17	18	Disconnected
18	45	Disconnected
18	46	Disconnected
18	47	Disconnected
23	54	Dead
23	55	Dead

Serial Number *11392* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	45	Disconnected
1	54	Disconnected
1	58	Disconnected
1	63	Disconnected
2	0	Disconnected
2	2	Disconnected
16	2	Disconnected

Serial Number *11417* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
1	1	Disconnected
3	43	Disconnected
3	45	Disconnected

Serial Number *11418* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
21	22	Disconnected
21	23	Disconnected
21	24	Disconnected

Serial Number *11422* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	2	Disconnected

Serial Number *11423* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
11	59	Disconnected
22	52	Disconnected
22	53	Disconnected
22	54	Disconnected
22	55	Disconnected

Serial Number *11437* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
16	6	Disconnected

Serial Number *11438* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
11	48	Disconnected
11	51	Disconnected
11	53	Disconnected
19	0	Disconnected

Serial Number *11451* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
7	49	Disconnected
7	50	Disconnected
15	21	Disconnected
15	22	Disconnected

Serial Number *11457* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
13	0	Disconnected
15	1	Disconnected
15	35	Disconnected
15	36	Disconnected
17	19	Disconnected
17	19	Disconnected
17	48	Disconnected

17	54	Disconnected
17	56	Disconnected
17	60	Disconnected
18	0	Disconnected
18	43	Disconnected
19	1	Disconnected
19	11	Disconnected
19	52	Disconnected

Serial Number *11459* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

19	13	Disconnected
----	----	--------------

Serial Number *11469* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16	2	Disconnected
----	---	--------------

Serial Number *11496* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16	6	Disconnected
----	---	--------------

Serial Number *11498* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

5	18	Disconnected
16	3	Disconnected

Serial Number *11504* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

6	14	Disconnected
6	15	Disconnected
7	23	Disconnected
7	24	Disconnected
18	23	Disconnected
18	24	Disconnected
22	5	Disconnected
22	22	Disconnected

Serial Number *11511* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

21	18	Disconnected
22	17	Disconnected

Serial Number *11512* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

2	27	Disconnected
---	----	--------------

Serial Number *11513* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

0	49	Disconnected
0	50	Disconnected
16	7	Disconnected

Serial Number *11520* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

16	58	Disconnected
----	----	--------------

Serial Number *11523* *Part Number* *LAT-DS-00898*

<i>IC</i>	<i>Channel</i>	<i>Defect</i>
-----------	----------------	---------------

23	51	Disconnected
23	52	Disconnected